UTP Telephone Panel,25/50 Port,Krone IDC

Installation Instruction

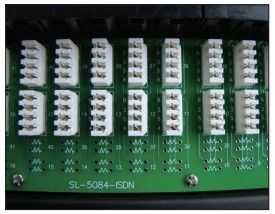

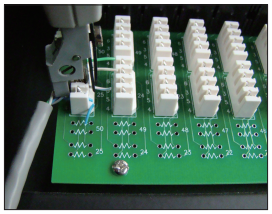
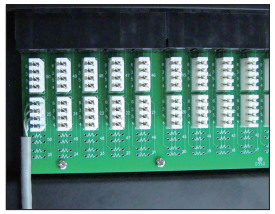

MODULAR WIRING CONFIGURATION		
COLOR CODE	T568A	T568B
White/Blue	5	5
Blue	4	4
White/Green	1	3
Green	2	6

Installation procedure

1. The cable between 22-26AWG can be build-in.
2. Remove the cover of cable with tool,and be careful of not damaging twisted - pair.
3. Put the cable in back of patch panel, and arrange the twisted-pair in IDC slot followed colored tab.
4. Try to make the untwisted wire shortest after installed.
5. Using Krone type tool to punch the twisted-pair down the slot,prick through the cover of cable.
6. Cut off the surplus cable of IDC end, make them neatly.
7. Assemble the patch panel on cabinet.
8. Bind cables on the cable management,not too tight.
9. Comply with ANSI/TIA/EIA -568A or 568B standard.